


Die-Head

MANUAL DIE-HEAD

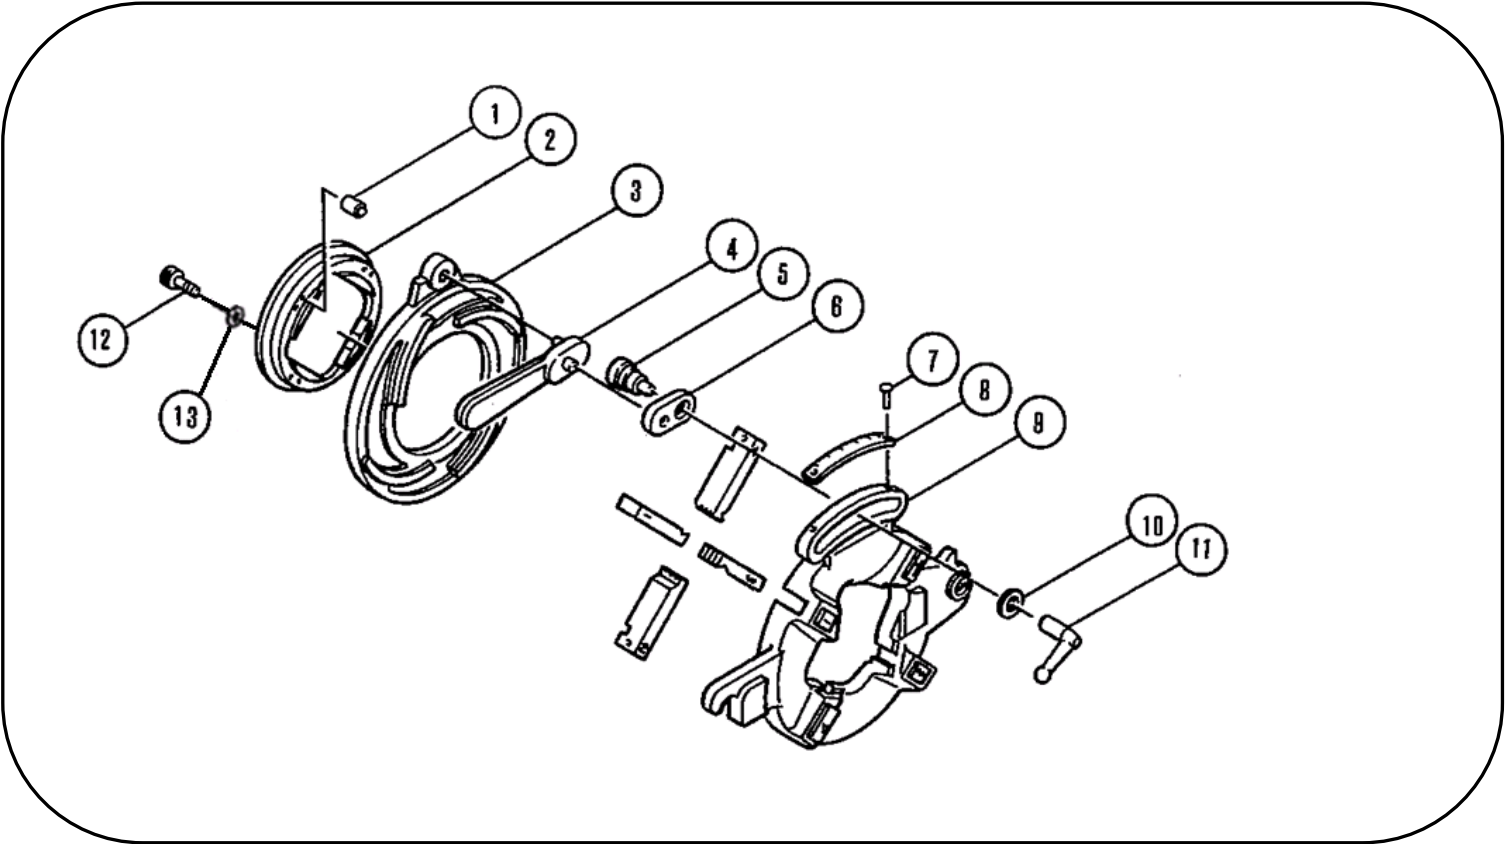

(A)	(B)	(C)	(D)	(E)	(F)	(G)
BSPT 1/2-2 NPT 1/2-2	BSPT 2-3 NPT 2.1/2-3	BSPT 3.1/2 - 4	BSPT 1/4-3/8 BSW 3/8-1	C 19 -39 BSPS 1/2-1.1/4	C 51-75 BSPS 1.1/2-3	NPT 1/4-3/8
63090	20127	04110	20114	20147	20157	20165
(H)	(I)	(J)	(K)	(L)	(M)	(N)
NPSM 1/2 -1.1/4	NPSM 2.1/2 -3	MM conduit 16-32	MM 10 -24	MM 27-36	BSW 1.1/8 - 2	UNC 3/8-1 UNF 3/8-1
20171	20172	63094	20158	63095	63096	20160

NO.	PARTS NAME		QTY	CODE NO		NO.	PARTS NAME		QTY	CODE NO
1	Ball Cup	ABCJLM	4	88598		8	Scale Plate	B	1	BE937
1	Ball Cup	DEFGHIKN	4	88597		8	Scale Plate	C	1	04115
2	Retaining Ring	AJLM	1	20129		8	Scale Plate	D	1	01150
2	Retaining Ring	B	1	20123		8	Scale Plate	E	1	20145
2	Retaining Ring	C	1	04113		8	Scale Plate	F	1	20155
2	Retaining Ring	DGKN	1	20133		8	Scale Plate	G	1	02134
2	Retaining Ring	EH	1	20143		8	Scale Plate	K	1	20159
2	Retaining Ring	FI	1	20153		8	Scale Plate	M	1	BE790
3	Cam Plate	AJLM	1	63092		8	Scale Plate	N	1	20161
3	Cam Plate	B	1	02122		9	Die-Head Body	AJLM	1	BE927
3	Cam Plate	C	1	04112		9	Die-Head Body	B	1	BE936
3	Cam Plate	DGKN	1	20132		9	Die-Head Body	C	1	BE246
3	Cam Plate	EH	1	20142		9	Die-Head Body	DGKN	1	20139
3	Cam Plate	FI	1	20152		9	Die-Head Body	EH	1	20146
4	Open-Close Lever	ABCJLM	1	BE933		9	Die-Head Body	FI	1	20156
4	Open-Close Lever	DEFGHIKN	1	01128		10	Die-Nut Washer	ABCJLM	1	BE928
5	Die-Pin	ABCJLM	1	BE931		10	Die-Nut Washer	DEFGHIKN	1	01127
5	Die-Pin	DEFGHIKN	1	01124		11	Die-Nut	ABCJLM	1	BE932
6	Link	ABCJLM	1	BE938		11	Die-Nut	DEFGHIKN	1	01126
6	Link	DEFGHIKN	1	01125		12	Stop Bolt 6x20	ABCDGJKLMN	4	80166
7	Plate Tack		2	83353		12	Stop Bolt 6x20	EFHI	4	80160
8	Scale Plate	A	1	BE934		13	Spring Washer M6	ABCJLM	4	81251